



Lighting Controls Device Cleaning

The COVID-19 pandemic has changed our lives, affecting where we learn, work, and play. Cleaning your environment may help to reduce the risk of spreading the virus. The following are instructions for cleaning wall stations during COVID-19 and beyond.



Wall Switch Cleaning

All of the following switches may be wiped-down with glass cleaner, vinegar and water, hydrogen peroxide, or a mild abrasive with soft cloth or paper towel.

NOTE: Do not spray cleaner on the switches directly. Spray on the cloth or paper towel prior to applying.

nLight®	Sensor Switch®	FRESCO™
nPODM	SPODM(R)	FCS RB
nPODMA	SPODM(R)A (JOT)	Vignette Digital Control Stations
nWSX	PTS	
nWSXA	PTSA	
rPODB	WSX	
rPODBA	WSXA (JOT)	
rPODL		
rPODLA		

Touch Screen Cleaning

The following touchscreens may be cleaned with a soft cloth moistened with rubbing alcohol or isopropyl alcohol.

nLight
nPOD GFX
FRESCO
FCS Touch Screen

The following touchscreens may be wiped down using only a dry microfiber cloth.

nLight
nPOD TOUCH
nDTC

Acuity Brands is committed to working with our customers to provide guidance on the most optimal way to interact with our lighting control solutions while maintaining a clean environment. Should you have any additional questions on the care and maintenance of our solutions, please contact us at 1-800-535-2465.

Note: The cleaning methods outlined in this document only apply to Acuity Brands® devices.